

# DVP06XA-S DVP06XA-S2

## Instruction Sheet 安裝說明 安裝說明

### Mixed Analog I/O Module

類比I/O混合模組  
模擬I/O混合模塊

2017-03-15  
5011671408-06X4



5011671408-06X4



Smarter. Greener. Together.

### Warning .....

**EN** DVP06XA-S/DVP06XA-S2 is an OPEN-TYPE device. It should be installed in a control cabinet free of airborne dust, humidity, electric shock and vibration. To prevent non-maintenance staff from operating DVP06XA-S/DVP06XA-S2, or to prevent an accident from damaging DVP06XA-S/DVP06XA-S2, the control cabinet in which DVP06XA-S/DVP06XA-S2 is installed should be equipped with a safeguard. For example, the control cabinet in which DVP06XA-S/DVP06XA-S2 is installed can be unlocked with a special tool or key.  
**EN** DO NOT connect AC power to any of I/O terminals, otherwise serious damage may occur. Please check all wiring again before DVP06XA-S/DVP06XA-S2 is powered up. After DVP06XA-S/DVP06XA-S2 is disconnected, Do NOT touch any terminals in a minute. Make sure that the ground terminal on DVP06XA-S/DVP06XA-S2 is correctly grounded in order to prevent electromagnetic interference.

**FR** DVP06XA-S/DVP06XA-S2 est un modèle OUVERT. Il doit être installé que dans une enceinte protectrice (boîtier, armoire, etc.) saine, dépourvue de poussière, d'humidité, de vibrations et hors d'atteinte des chiens électriques. La protection doit éviter que les personnes non habilitées à la maintenance puissent accéder à l'appareil (par exemple, une clé ou un outil doivent être nécessaire pour ouvrir la protection).

**FR** Ne pas appliquer la tension secteur sur les bornes d'entrées/Sorties, ou l'appareil DVP06XA-S/DVP06XA-S2 pourra être endommagé. Merci de vérifier encore une fois le câble avant la mise sous tension du DVP06XA-S/DVP06XA-S2. Lors de la déconnection de l'appareil, ne pas toucher les connecteurs dans la minute suivante. Vérifier que la terre est bien reliée au connecteur de terre afin d'éviter toute interférence électromagnétique.

### ● Introduction


#### ● Model Explanation & Peripherals

For you choosing the Delta DVP series PLC. The analog input/output module DVP06XA-S/DVP06XA-S2 receives external 4-point analog signal input (voltage or current) and converts it into 12-bit digital signals. DVP06XA-S/DVP06XA-S2 receives two pieces of 12-bit digital data from a PLC, and converts the digital data into 2-point analog signal output (voltage or current). There are 49 CRs (control registers) in the module, and each register has 16 bits. A DVP series slim type PLC can read data from DVP06XA-S/DVP06XA-S2 or write data to DVP06XA-S/DVP06XA-S2 by means of the instruction FROM/TO.

The user can select voltage or current input by wiring. Range of voltage input: ±10VDC (resolution: 5mV). Range of current input: ±20mA (resolution: 20μA).


The user also select voltage or current output by wiring. Range of voltage output: 0V ~ +10VDC (resolution: 2.5mV). Range of current output: 0mA ~ 20mA (resolution: 5μA).

#### ● Outline & Arrangement of the Terminals

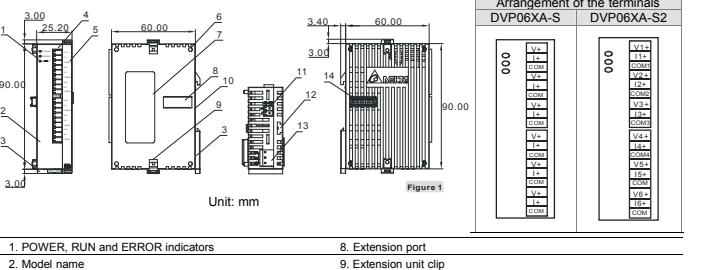

- POWER, RUN and ERROR indicators
- Model name
- DIN rail clip
- I/O terminals
- I/O point indicators
- Mounting hole of the extension unit
- Nameplate
- Extension port
- Extension port
- Extension unit clip
- DIN rail groove (35mm)
- RS-485 communication port
- Mounting groove of the extension unit
- DC power input
- Extension port

### ● External Wiring

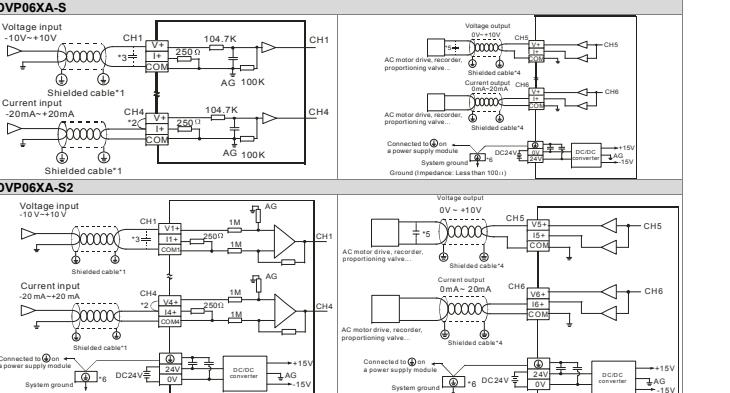

Note 1: Please isolate the analog input cable from other power cables.  
Note 2: If current is connected, the connection between  $V^+$  and  $I^+$  (the connection between  $V^+$  and  $I^+$ ) needs to be a short circuit.  
Note 3: If ripple voltage results in interference with the wiring, please connect a  $0.1\text{-}0.47\mu\text{F}$  and  $25\text{pF}$  capacitor.  
Note 4: Please isolate the analog output cable from other power cables.  
Note 5: If there is interference with the wiring, and makes the ripple voltage of the input terminal of the load connected high, please connect a  $0.1\text{-}0.47\mu\text{F}$  and  $25\text{pF}$  capacitor.  
Note 6: Please connect on a power supply module and on the analog input module to the system ground, and then ground the system ground or connect the system ground to a distribution box.

### ● Specifications

Mixed analog/digital (A/D) module	Voltage input	Current input
Power supply voltage	24VDC (20.4VDC ~ 28.8VDC) (-15% ~ +20%)	
Analog input channel	4 channels per module	
Analog input range	±10V	±20mA
Digital data range	±2,000	±1,000
Resolution	12 bits ( $1_{LSB}$ =5mV)	11 bits ( $1_{LSB}$ =20μA)
Input impedance (DVP06XA-S)	200kΩ	250Ω
Input impedance (DVP06XA-S2)	≥ 1MΩ	250Ω
Overall accuracy	±0.5% of full scale of 25°C (77°F), ±1% of full scale during 0 ~ 55°C (32 ~ 131°F)	
Response time	3ms × Number of channels	
Isolation method	DVP06XA-S: The analog circuit and the digital circuit are grounded together. There is no isolation. DVP06XA-S2: The analog circuit is isolated from the digital circuit by an optocoupler, but the analog channels are not isolated from one other.	
Absolution input range	±15V	±32mA
Digital data format	16-bit 2's complement	
Average function	Yes (CR#2 ~ CR#5 can be set and the range is K1 ~ K20)	
Self diagnostic function self detection	Upper bound and lower bound detection per channel	
Mixed/digital/analog (D/A) module	Voltage output	Current output
Analog signal output channels	2 channel per module	
Analog output range	0 ~ 10V	0 ~ 20mA
Digital data range	0 ~ 4,000	0 ~ 4,000
Resolution	12 bits ( $1_{LSB}$ =2.5mV)	12 bits ( $1_{LSB}$ =5μA)
Output impedance	0.50 or lower	
Overall accuracy	±0.5% of full scale of 25°C (77°F), ±1% of full scale during 0 ~ 55°C (32 ~ 131°F)	
Response time	3ms × Number of channels	

CR#	RS-485 parameter address	Latched	Register name	b15 b14 b13 b12 b11 b10 b9 b8 b7 b6 b5 b4 b3 b2 b1 b0
#13	H40D5	X R	Present value of CH2 input signal	CH6 CH5 CH4 CH3 CH2 CH1
#14	H40D6	X R	Present value of CH3 input signal	
#15	H40D7	X R	Present value of CH4 input signal	
#18	H40DA	O R/W	To adjust OFFSET value of CH1	Offset setting of CH1 ~ CH2. Factory setting is K0 and unit is LSB.
#19	H40DB	O R/W	To adjust OFFSET value of CH2	Voltage input: setting range is K-1,000.00 ~ K-1,000.00. Current input: setting range is K-1,000.00 ~ K-1,000.00.
#20	H40DC	O R/W	To adjust OFFSET value of CH3	Offset setting of CH3 ~ CH4. Factory setting is K0 and unit is LSB.
#21	H40DD	O R/W	To adjust OFFSET value of CH4	Voltage input: setting range is K-1,000.00 ~ K-1,000.00. Current input: setting range is K-1,000.00 ~ K-1,000.00.
#22	H40DE	O R/W	To adjust OFFSET value of CH5	Offset setting of CH5 ~ CH6. Factory setting is K0 and unit is LSB.
#23	H40DF	O R/W	To adjust OFFSET value of CH6	The setting range is K-2,000.00 ~ K-2,000.00.
#24	H40E0	O R/W	To adjust GAIN value of CH1	GAIN setting of CH1~CH4. Factory setting is K1,000 and unit is LSB.
#25	H40E1	O R/W	To adjust GAIN value of CH2	Voltage input: setting range is K-800.00 ~ K-4,000.00. Current input: setting range is K-800.00 ~ K-2,600.00.
#26	H40E2	O R/W	To adjust GAIN value of CH3	Please be notice that GAIN VALUE = OFFSET VALUE = +200.00 ~ +3,000.00 (voltage) or +200.00 ~ +1,600.00 (current)
#27	H40E3	O R/W	To adjust GAIN value of CH4	GAIN setting of CH1~CH4. Factory setting is K1,000 and unit is LSB.
#28	H40E4	O R/W	To adjust GAIN value of CH5	Voltage input: setting range is K-800.00 ~ K-4,000.00. Current input: setting range is K-800.00 ~ K-2,600.00.
#29	H40E5	O R/W	To adjust GAIN value of CH6	The setting range is K0 ~ K4,000. Please be noticed that GAIN VALUE = OFFSET VALUE = +400.00 ~ +6,000.00 (voltage or current).

CR#42~CR#29: If the value difference comes up small (within range), the output signal resolution is then slim and the variation is definitely larger. On the contrast, if the value difference exceeds the range, the output signal resolution becomes larger and the variation is definitely smaller.

#30 H40E6 X R Error status Data register stores the error status, see error code chart for details.

CR#30 is the error code. Please refer to the chart below.

Error description	Value	b15~b12 b11 b10 b9 b8 b7 b6 b5 b4 b3 b2 b1 b0
Abnormal power	K1 (H1)	0 0 0 0 0 0 0 0 0 0 0 0 0 1
The D/A output exceeds the range.	K2 (H2)	0 0 0 0 0 0 0 0 0 0 0 0 1 0
Mode error	K4 (H4)	0 0 0 0 0 0 0 0 0 0 0 1 0 0
Offset/gain error	K8 (H8)	0 0 0 0 0 0 0 0 0 0 1 0 0 0
Hardware malfunction	K16 (H10)	0 0 0 0 0 0 0 0 0 1 0 0 0 0
Abnormal digital value	K32 (H20)	0 0 0 0 0 0 0 0 1 0 0 0 0 0
Incorrect number of values averaged	K64 (H40)	0 0 0 0 0 0 1 0 0 0 0 0 0 0
Instruction error	K128 (H80)	0 0 0 0 0 1 0 0 0 0 0 0 0 0
The input received by CH1 is out of the range.	K256 (H100)	0 0 0 0 1 0 0 0 0 0 0 0 0 0
The input received by CH2 is out of the range.	K512 (H200)	0 0 0 1 0 0 0 0 0 0 0 0 0 0
The input received by CH3 is out of the range.	K1024 (H400)	0 1 0 0 0 0 0 0 0 0 0 0 0 0
The input received by CH4 is out of the range.	K2048 (H800)	1 0 0 0 0 0 0 0 0 0 0 0 0 0

Note: Each error code corresponds to a bit (b0 ~ b11). Two or more errors may happen at the same time. 0 means there is an error, and 1 means there is an error.

Example: If the digital input exceeds 4,000, the error K2 will occur. If the analog output exceeds 10V, the errors K2 and K32 will occur. (A/D does not support displaying the error K2).

#31 H40E7 X R Error status RS-485 communication address setting Setting range is K1 ~ K254 and factory setting is K1.

Communication baud rate (4,800/9,600/19,200/38,400/57,600/115,200 bps). For ASCII mode, date format is 7 bits, even, 1 stop bit (7, E, 1). For RTU mode, date format is 8 bits, even, 1 stop bit (8, E, 1).

#4,800 bps (bit/sec); b1: 9,600 bps (bit/sec) (factory setting); b2: 19,200 bps (bit/sec); b3: 38,400 bps (bit/sec); b4: 57,600 bps (bit/sec); b5: 115,200 bps (bit/sec); b6 ~ b13: reserved; b14: switch between low bit and high bit of CRC code (only for RTU mode); b15: RTU mode.

#32 H40E8 O R/W Communication baud rate setting Example: Setting of CH1

1. When b0=0, user can set OFFSET and GAIN value of CH1 (CR#18, CR#24). When b0=1, inhibit user to adjust OFFSET and GAIN value of CH1 (CR#18, CR#24).  
2. b1 means if characteristic register is latched. b1=0 = factory.

#33 H40E9 O R/W Reset to factory setting and set characteristics adjustable priority

**注意事項**

- 請在使用之前，詳細閱讀本使用說明書。
- 請勿在上電時觸摸任何端子。實施配線，務必關閉電源。
- 本機為開放型（OPEN TYPE）機殼，因此使用者使用本機時，必須將其安裝於具防塵、防潮及免於電擊/衝擊之外殼機箱內。另須具備保護措施（如：特殊之工具或鑰匙才可打開）防止非維護人員操作或意外衝擊。
- 交流輸入電源不可直接連接於輸出信號端，否則可能造成嚴重的損壞，因此請在上電之前再次確認電源配線。
- 輸入電源切斷後，一分鐘之內，請勿觸摸內部電路。
- 本體上之接地端子④，務必正確的接地，可提高產品抗雜訊能力。

### 1 產品簡介

#### ■ 說明及週邊裝置



- 謝謝您採用台灣 DVP 系列產品。DVP06XA-S/DVP06XA-S2 類比輸入/輸出混合模組包含可接受外部 4 點類比信號輸入（電壓或電流皆可），將之轉換成 12 位元之數位信號。及類比信號輸出部份接受來自 PLC 主機的 2 组 12 位元數位資料，再將數位資料轉換為 2 點類比信號輸出（電壓/電流皆可）模組內具有 49 個 CR (Control Register) 記憶體，每個暫存器有 16 bits。透過 DVP 薄型系列（Slim type）主機程式以指令 FROM/TO 來讀寫模組內之資料。
- 類比信號輸入部份使用者可經由組件選擇電壓輸入或電流輸入，電壓輸入範圍  $\pm 10VDC$  (解析度為 5mV)。電流輸入範圍  $\pm 20mA$  (解析度為  $20\mu A$ )。
- 類比信號輸出部份使用者可經由組件選擇電壓輸出或電流輸出，電壓輸出範圍 0V ~ +10VDC (解析度為 2.5mV)。

#### ■ 產品各部介紹及端子配置

產品各部介紹請參考

保護		DVP06XA-S2 類比與數位端使用光耦合器隔離，類比通道間未隔離。																	
電壓輸出有短路保護但須注意長時間短路仍可能造成內部線路損壞、電流輸出可開路，有：包含 ASCII/RTU 模式、預設通訊格式為 9600, 7, E, 1, ASCII 詳細通訊格式請參考 CR#32 說明。																			
備註 1：當與 PLC 主機串接時，RS-485 通訊無法使用。 備註 2：其通訊格式只可採用 RS-485 通訊修改，無法由主機連接模組方式，下達 TO 指令修改。詳細內容請參考 DVP 程式篇手冊之附錄「模組通訊設定」篇。																			
與 DVP-PLC 主機串接說明		模組編號以靠近主機之順序自動編號由 0 到 7，最大可接 8 台且不佔用數位 I/O 點數。																	
<b>■ 其他規格</b>																			
額定最大消耗功率		電源規格 直流 24VDC ( 20.4VDC ~ 28.8VDC ) ( -15% ~ +20% ) : 2W . 由外部電源供應。																	
操作/儲存環境		環境規格 操作：0°C ~ 55°C ( 濕度 ) , 5~95% ( 濕度 ) , 汚染等級 2 ; 儲存：-25°C ~ 70°C ( 溫度 ) , 5 ~ 95% ( 濕度 )																	
耐振動/衝擊		國際標準規範 IEC 61131-2 : IEC 68-2-6 ( TEST Fc ) / IEC 61131-2 & IEC 68-2-27 ( TEST Ea )																	
<b>❸ 控制暫存器 CR</b>																			
CR 編號	RS-485 參數位址	保持型	暫存器名稱	b15	b14	b13	b12	b11	b10	b9	b8	b7	b6	b5	b4	b3	b2	b1	b0
				CH6	CH5	CH4	CH3	CH2	CH1	CH3	CH2	CH1	CH3	CH2	CH1	CH0			
#0	H'40C8	O	R	系統內定 資料長度 8 位元 ( b7 ~ b0 ) -> DVP06XA-S 機種編碼= H'CC - DVP06XA-S2 機種編碼= H'D4 。使用者可在程式中將此機種型號讀出，以判斷擴充模組是否存在。															
#1	H'40C9	O	R/W	機種型號	輸入模式設定 ( CH1 ~ CH4 ) :														
					模式 0：電壓輸入模式 (-10V ~ +10V ) 模式 1：電壓輸入模式 (-6V ~ +10V ) 模式 2：電流輸入模式 (-12mA ~ +20mA ) 模式 3：電流輸入模式 (-20mA ~ +20mA ) 模式 7：通過關閉 ( 僅適用 DVP06XA-S2 機種 ) 輸出模式設定 ( CH5 ~ CH6 ) : 模式 0：電壓輸出模式 ( 0V ~ 10V ) , 模式 1：電壓輸出模式 ( 2V ~ 10V ) , 模式 2：電流輸出模式 ( 4mA ~ 20mA ) 模式 3：電流輸出模式 ( 0mA ~ 20mA )														
CR#1 : b0 ~ b11 內容值用來設定類比信號輸入 ( ADA ) 部份四個通道的工作模式，每個通道各有四種模式，可獨立設定。例如要將 CH1 ~ CH4 分別輸入設定為 CH1 : 模式 0 ( b2 ~ b0=000 ) ; CH2 : 模式 1 ( b5 ~ b3=001 ) ; CH3 : 模式 2 ( b8 ~ b6=010 ) ; CH4 : 模式 3 ( b11 ~ b9=011 ) 時，須將 b0 ~ b11 設為 H'6868 , b12 ~ b15 內容值用來設定類比信號輸出 ( DA ) 部份兩個通道的工作模式，每各通道各有四種模式，可獨立設定。例如要將 CH5 ~ CH6 分別輸出設定為 CH5 : 模式 2 ( b13 ~ b12=10 ) ; CH6 : 模式 1 ( b15 ~ b14=001 ) ，須將 b12 ~ b15 設為 H'6 。出廠設定值為 H'0000 。																			
#2	H'40CA	O	R/W	CH1	平均次數														
#3	H'40CB	O	R/W	CH2	平均次數														
#4	H'40CC	O	R/W	CH3	平均次數														
#5	H'40CD	O	R/W	CH4	平均次數														
#6	H'40CE	x	R	CH1	輸入信號平均值														
#7	H'40CF	x	R	CH2	輸入信號平均值														
#8	H'40DO	x	R	CH3	輸入信號平均值														
#9	H'40D1	x	R	CH4	輸入信號平均值														
#10	H'40D2	x	R/W	CH5	輸出數值														
#11	H'40D3	x	R/W	CH6	輸出數值														
#12	H'40D4	x	R	CH1	輸入信號現在值														
#13	H'40D5	x	R	CH2	輸入信號現在值														
#14	H'40D6	x	R	CH3	輸入信號現在值														
#15	H'40D7	x	R	CH4	輸入信號現在值														
#16	H'40DA	O	R/W	CH1	微調 OFFSET 值														
#17	H'40DB	O	R/W	CH2	微調 OFFSET 值														
#20	H'40DC	O	R/W	CH3	微調 OFFSET 值														
#21	H'40DD	O	R/W	CH4	微調 OFFSET 值														
#22	H'40DE	O	R/W	CH5	微調 OFFSET 值														
#23	H'40DF	O	R/W	CH6	微調 OFFSET 值														
通道 CH1 ~ CH4 輸入信號平均值顯示。 假設平均次數設定為 10，即每累計 10 次通道 CH1 ~ CH4 輸入信號時取一次平均。																			
通道 CH5 ~ CH6 輸出數值，可設定範圍 K0 ~ K4,000，出廠設定值為 K0，單位為 LSB。																			
通道 CH1 ~ CH4 輸入信號現在值顯示。 通道 CH1 ~ CH4 輸入信號現在值顯示。																			
通道 CH1 ~ CH4 輸入信號現在值顯示。																			
通道 CH5 ~ CH6 輸出數值，可設定範圍 K-2,000 ~ K2,000，出廠設定值為 K0，單位為 LSB。																			

編號	參數位址		CH0	CH5	CH4	CH3	CH2	CH1																																																																																																																																																																																																			
#24	H40E00	○ R/W	CH1 微調 GAIN 值	通道 CH1 ~ CH4 訊號的 GAIN 設定，出廠設定值為 K1,000，單位為 LSB，電壓輸入時，可設定範圍 K-800,SB ~ K+4,000,LSB																																																																																																																																																																																																							
#25	H40E01	○ R/W	CH2 微調 GAIN 值	電壓輸入時：可設定範圍 K-800,SB ~ K+4,000,LSB																																																																																																																																																																																																							
#26	H40E02	○ R/W	CH3 微調 GAIN 值	電壓輸入時：可設定範圍 K-800,SB ~ K+2,600,LSB																																																																																																																																																																																																							
#27	H40E03	○ R/W	CH4 微調 GAIN 值																																																																																																																																																																																																								
CR#24~CR#27：需特別注意 GAIN 值 - OFFSET 值 = +200,LSB ~ +3,000,SB (電壓) 或 +200,SB ~ +1,600,SB (電流)，當此值較小時 (急斜線)，對於輸入信號之解析度較細，數位值可做較大的變化，當此值較大時 (緩斜線)，對於輸入信號之解析度較粗，數位值可做較小的變化。																																																																																																																																																																																																											
#28	H40E04	○ R/W	CH5 微調 GAIN 值	通道 CH5 ~ CH6 訊號的 GAIN 設定，可設定範圍 K0 ~ K4,000，出廠設定值為 K2,000，單位為 LSB，																																																																																																																																																																																																							
#29	H40E05	○ R/W	CH6 微調 GAIN 值																																																																																																																																																																																																								
CR#28~CR#29：需特別注意 GAIN 值 - OFFSET 值 = +400,LSB ~ +6,000,LSB (電壓或電流)，當此值較小時 (急斜線)，對於輸出信號之解析度較細，數位值變化較大，當此值較大時 (緩斜線)，對於輸出信號之解析度較粗，數位值變化較小。																																																																																																																																																																																																											
#30	H40E06	× R	錯誤狀態	儲存所有錯誤狀態的資料暫存器，詳細內容請參考錯誤信息表。																																																																																																																																																																																																							
CR#30：錯誤狀態值請參考錯誤狀態表：																																																																																																																																																																																																											
<table border="1"> <thead> <tr> <th>錯誤狀態</th> <th>內容值</th> <th>b15 ~ b12</th> <th>b11</th> <th>b10</th> <th>b9</th> <th>b8</th> <th>b7</th> <th>b6</th> <th>b5</th> <th>b4</th> <th>b3</th> <th>b2</th> <th>b1</th> <th>b0</th> </tr> </thead> <tbody> <tr> <td>電源異常</td> <td>K1 (H'1)</td> <td>保留</td> <td>0</td><td>0</td><td>0</td><td>0</td><td>0</td><td>0</td><td>0</td><td>0</td><td>0</td><td>0</td><td>0</td><td>1</td> </tr> <tr> <td>刻度超過</td> <td>K2 (H'2)</td> <td></td> <td>0</td><td>0</td><td>0</td><td>0</td><td>0</td><td>0</td><td>0</td><td>0</td><td>0</td><td>0</td><td>1</td><td>0</td> </tr> <tr> <td>模式設定錯誤</td> <td>K4 (H'4)</td> <td></td> <td>0</td><td>0</td><td>0</td><td>0</td><td>0</td><td>0</td><td>0</td><td>0</td><td>0</td><td>1</td><td>0</td><td>0</td> </tr> <tr> <td>O/G 錯誤</td> <td>K8 (H'8)</td> <td></td> <td>0</td><td>0</td><td>0</td><td>0</td><td>0</td><td>0</td><td>0</td><td>0</td><td>1</td><td>0</td><td>0</td><td>0</td> </tr> <tr> <td>硬體故障</td> <td>K16 (H'10)</td> <td></td> <td>0</td><td>0</td><td>0</td><td>0</td><td>0</td><td>0</td><td>0</td><td>1</td><td>0</td><td>0</td><td>0</td><td>0</td> </tr> <tr> <td>變換值異常</td> <td>K32 (H'20)</td> <td></td> <td>0</td><td>0</td><td>0</td><td>0</td><td>0</td><td>0</td><td>1</td><td>0</td><td>0</td><td>0</td><td>0</td><td>0</td> </tr> <tr> <td>平均次數設定錯誤</td> <td>K64 (H'40)</td> <td></td> <td>0</td><td>0</td><td>0</td><td>0</td><td>0</td><td>1</td><td>0</td><td>0</td><td>0</td><td>0</td><td>0</td><td>0</td> </tr> <tr> <td>指令錯誤</td> <td>K128 (H'80)</td> <td></td> <td>0</td><td>0</td><td>0</td><td>0</td><td>1</td><td>0</td><td>0</td><td>0</td><td>0</td><td>0</td><td>0</td><td>0</td> </tr> <tr> <td>通過 1 超出範圍</td> <td>K256 (H'100)</td> <td></td> <td>0</td><td>0</td><td>0</td><td>1</td><td>0</td><td>0</td><td>0</td><td>0</td><td>0</td><td>0</td><td>0</td><td>0</td> </tr> <tr> <td>通過 2 超出範圍</td> <td>K512 (H'200)</td> <td></td> <td>0</td><td>0</td><td>1</td><td>0</td><td>0</td><td>0</td><td>0</td><td>0</td><td>0</td><td>0</td><td>0</td><td>0</td> </tr> <tr> <td>通過 3 超出範圍</td> <td>K1024 (H'400)</td> <td></td> <td>0</td><td>1</td><td>0</td><td>0</td><td>0</td><td>0</td><td>0</td><td>0</td><td>0</td><td>0</td><td>0</td><td>0</td> </tr> <tr> <td>通過 4 超出範圍</td> <td>K2048 (H'800)</td> <td></td> <td>1</td><td>0</td><td>0</td><td>0</td><td>0</td><td>0</td><td>0</td><td>0</td><td>0</td><td>0</td><td>0</td><td>0</td> </tr> </tbody> </table>									錯誤狀態	內容值	b15 ~ b12	b11	b10	b9	b8	b7	b6	b5	b4	b3	b2	b1	b0	電源異常	K1 (H'1)	保留	0	0	0	0	0	0	0	0	0	0	0	1	刻度超過	K2 (H'2)		0	0	0	0	0	0	0	0	0	0	1	0	模式設定錯誤	K4 (H'4)		0	0	0	0	0	0	0	0	0	1	0	0	O/G 錯誤	K8 (H'8)		0	0	0	0	0	0	0	0	1	0	0	0	硬體故障	K16 (H'10)		0	0	0	0	0	0	0	1	0	0	0	0	變換值異常	K32 (H'20)		0	0	0	0	0	0	1	0	0	0	0	0	平均次數設定錯誤	K64 (H'40)		0	0	0	0	0	1	0	0	0	0	0	0	指令錯誤	K128 (H'80)		0	0	0	0	1	0	0	0	0	0	0	0	通過 1 超出範圍	K256 (H'100)		0	0	0	1	0	0	0	0	0	0	0	0	通過 2 超出範圍	K512 (H'200)		0	0	1	0	0	0	0	0	0	0	0	0	通過 3 超出範圍	K1024 (H'400)		0	1	0	0	0	0	0	0	0	0	0	0	通過 4 超出範圍	K2048 (H'800)		1	0	0	0	0	0	0	0	0	0	0	0
錯誤狀態	內容值	b15 ~ b12	b11	b10	b9	b8	b7	b6	b5	b4	b3	b2	b1	b0																																																																																																																																																																																													
電源異常	K1 (H'1)	保留	0	0	0	0	0	0	0	0	0	0	0	1																																																																																																																																																																																													
刻度超過	K2 (H'2)		0	0	0	0	0	0	0	0	0	0	1	0																																																																																																																																																																																													
模式設定錯誤	K4 (H'4)		0	0	0	0	0	0	0	0	0	1	0	0																																																																																																																																																																																													
O/G 錯誤	K8 (H'8)		0	0	0	0	0	0	0	0	1	0	0	0																																																																																																																																																																																													
硬體故障	K16 (H'10)		0	0	0	0	0	0	0	1	0	0	0	0																																																																																																																																																																																													
變換值異常	K32 (H'20)		0	0	0	0	0	0	1	0	0	0	0	0																																																																																																																																																																																													
平均次數設定錯誤	K64 (H'40)		0	0	0	0	0	1	0	0	0	0	0	0																																																																																																																																																																																													
指令錯誤	K128 (H'80)		0	0	0	0	1	0	0	0	0	0	0	0																																																																																																																																																																																													
通過 1 超出範圍	K256 (H'100)		0	0	0	1	0	0	0	0	0	0	0	0																																																																																																																																																																																													
通過 2 超出範圍	K512 (H'200)		0	0	1	0	0	0	0	0	0	0	0	0																																																																																																																																																																																													
通過 3 超出範圍	K1024 (H'400)		0	1	0	0	0	0	0	0	0	0	0	0																																																																																																																																																																																													
通過 4 超出範圍	K2048 (H'800)		1	0	0	0	0	0	0	0	0	0	0	0																																																																																																																																																																																													
註：每個錯誤狀態由相對應之位 b0 ~ b11 決定，有可能會同時產生兩個以上之錯誤狀態，0 代表正常無錯誤，1 代表有錯誤狀態產生。																																																																																																																																																																																																											
例：當數位輸入超過 4,000 時會顯示刻度超過 (K2) 錯誤；當類比輸出超過 10V 時，會同時顯示變換值異常 (K32) 及刻度超過 (K2) 的錯誤狀態。(AD 不支援顯示刻度超過錯誤)																																																																																																																																																																																																											
#31	H40E07	○ R/W	通訊位址設定	設定 RS-485 通訊位址，設定範圍 01 ~ 254，出廠設定值為 K1。 設定訊訊速率，共有 4,800 / 9,600 / 19,200 bps / 38,400 bps / 57,600 bps / 115,200 bps 六種。ASCII 模式資料格式固定為 7 bits - 偶位元、1 stop bit (7 - E - 1) - RTU 模式資料格式固定為 8 bits - 偶位元、1 stop bit (8 - E - 1)。 B0 : 4,800 bps (位元/秒) B1 : 9,600 bps (位元/秒) (出廠設定值) B2 : 19,200 bps (位元/秒) B3 : 38,400 bps (位元/秒) B4 : 57,600 bps (位元/秒) B5 : 115,200 bps (位元/秒) B6 ~ B13 : 保留 B14 : CRC 檢查碼高低位交換 (僅 RTU 模式有效) b15 : ASCII/RTU 模式切換																																																																																																																																																																																																							
#32	H40E08	○ R/W	通訊速率(Baud rate) 設定																																																																																																																																																																																																								
#33	H40E09	○ R/W	恢復出廠設定及設定特性微調權限	CH1 ~ CH4 以 CH1 設定來說明： 1. 當 b0 為 0 時，可由使用者設定 CH1 的特性微調 CR#18 ~ CR#24，當 b0 為 1 時，禁止使用者調整 CH1 特性微調 CR#18 ~ CR#24。 2. b1 代表是否特性微調暫存器為停電保持，b1=0 (出廠預設值，要停電保持) - b1=1 (非停電保持)。 3. b2 設定為 1 時，所有設定值將回復為原廠設定值。 CH5 ~ CH6 以 CH5 設定來說明 (b13, b12)： 00 : 可微調、停電保持，01 : 可微調、不停電保持，																																																																																																																																																																																																							

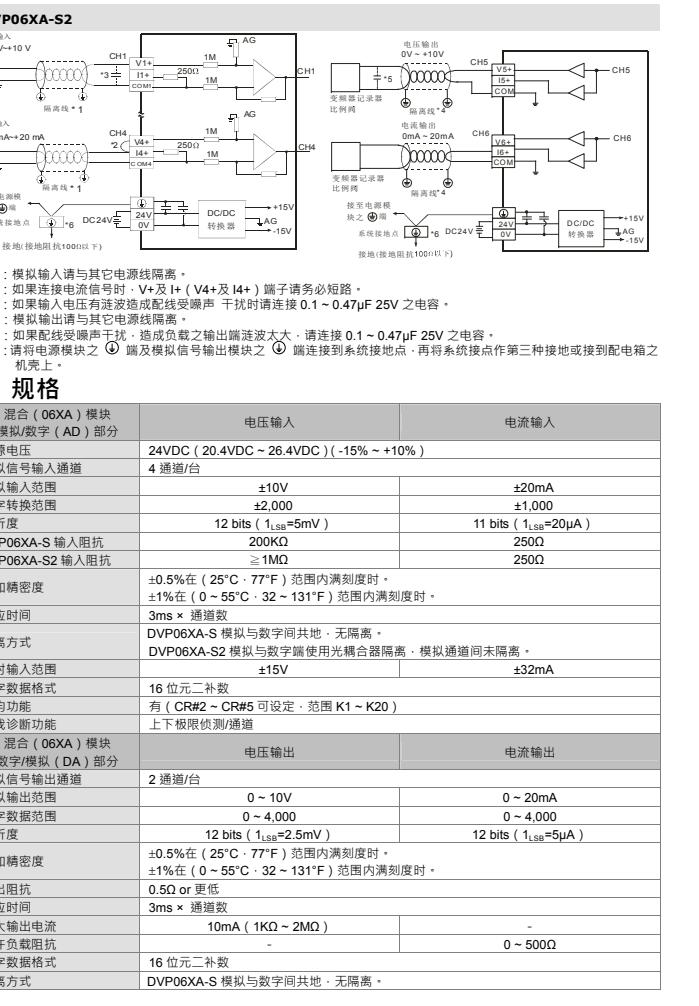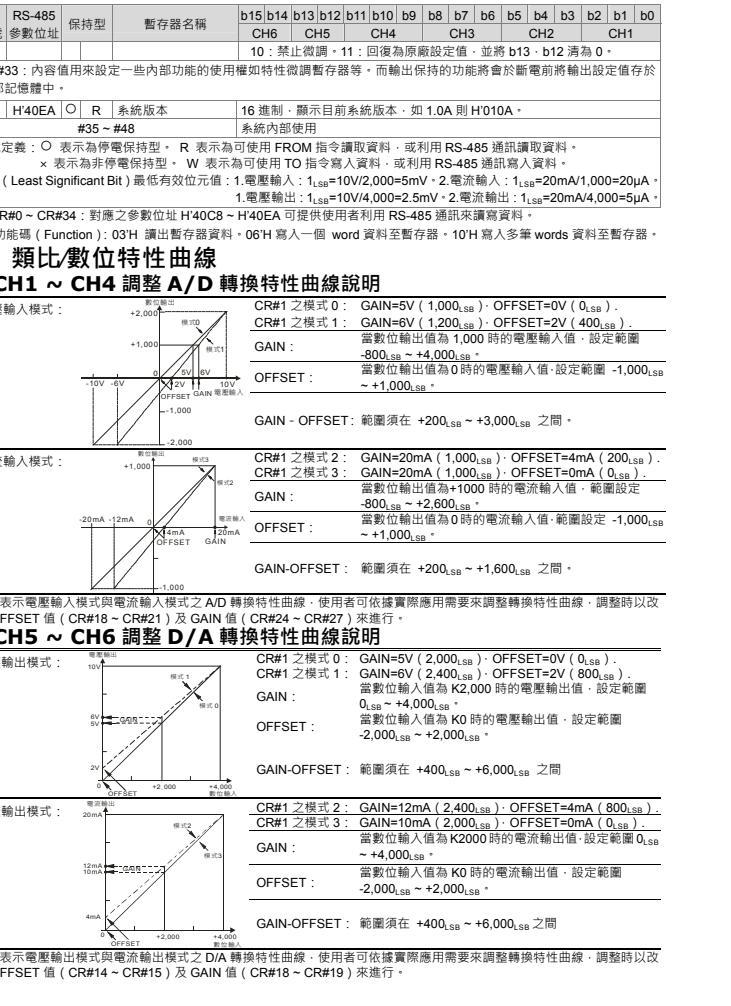

请在使用之前，详细阅读本使用说明书。  
严禁配戴。务必关闭电源。

- 交流输入电源不可连接于输入/出信号端，否则可能造成严重的损坏。因此请在上电之前再次确认电源配线。  
插入电源切断后，一分钟之内，请勿触摸内部电路。  
机体上的接地带端子④ 必须正确的接地。可提高产品抗噪声能力。

# 产品简介

#### 说明及周边装置


- 感谢您采用台达 DVP 系列产品 -DVP06XA-S/DVP06XA-S2 模拟输入/输出混合模块包含可接受外部 4 点模拟信号输入（电压或电流皆可），将之转换成 12 位元的数字信号。及模拟信号输出部份接受来自 PLC 主机的 2 组 12 位元数字数据，再将数字数据转换为 2 倍模拟信号输出（电压/电流皆可）模块内具有 49 个 CR (Control Register) 寄存器，每个寄存器有 16 bits，透过 DVP 薄型系列 (Slim type) 主机程序以指令 FROM/TO 来读写模块内的数据。

模块信号输入部份使用者可以经由配线选择电压输入或电流输入，电压输入范围 ±10VDC (解析度为 5mV)，电流输入范围 +20mA (解析度为 20μA)。

模拟信号输出部份使用者可经由

2.5mV)。电流输出范围 0mA ~ 20mA (解析度为 5μA)

端子配置																																																																													
DVP06XA-S	DVP06XA-S2																																																																												
<table border="1"> <tr><td>000</td><td>V<sub>A</sub></td></tr> <tr><td></td><td>GND</td></tr> <tr><td></td><td>V<sub>C</sub></td></tr> <tr><td></td><td>I<sub>A</sub></td></tr> <tr><td></td><td>I<sub>B</sub></td></tr> <tr><td></td><td>I<sub>C</sub></td></tr> <tr><td></td><td>V<sub>T</sub></td></tr> <tr><td></td><td>I<sub>T</sub></td></tr> <tr><td></td><td>I<sub>M</sub></td></tr> <tr><td></td><td>V<sub>R</sub></td></tr> <tr><td></td><td>I<sub>R</sub></td></tr> <tr><td></td><td>V<sub>E</sub></td></tr> <tr><td></td><td>I<sub>E</sub></td></tr> <tr><td></td><td>V<sub>A</sub></td></tr> <tr><td></td><td>I<sub>A</sub></td></tr> <tr><td></td><td>V<sub>C</sub></td></tr> <tr><td></td><td>I<sub>B</sub></td></tr> <tr><td></td><td>I<sub>C</sub></td></tr> <tr><td></td><td>GND</td></tr> </table>	000	V <sub>A</sub>		GND		V <sub>C</sub>		I <sub>A</sub>		I <sub>B</sub>		I <sub>C</sub>		V <sub>T</sub>		I <sub>T</sub>		I <sub>M</sub>		V <sub>R</sub>		I <sub>R</sub>		V <sub>E</sub>		I <sub>E</sub>		V <sub>A</sub>		I <sub>A</sub>		V <sub>C</sub>		I <sub>B</sub>		I <sub>C</sub>		GND	<table border="1"> <tr><td>000</td><td>V<sub>A</sub></td></tr> <tr><td></td><td>GND</td></tr> <tr><td></td><td>V<sub>C</sub></td></tr> <tr><td></td><td>I<sub>A</sub></td></tr> <tr><td></td><td>I<sub>B</sub></td></tr> <tr><td></td><td>I<sub>C</sub></td></tr> <tr><td></td><td>V<sub>T</sub></td></tr> <tr><td></td><td>I<sub>T</sub></td></tr> <tr><td></td><td>I<sub>M</sub></td></tr> <tr><td></td><td>V<sub>R</sub></td></tr> <tr><td></td><td>I<sub>R</sub></td></tr> <tr><td></td><td>V<sub>E</sub></td></tr> <tr><td></td><td>I<sub>E</sub></td></tr> <tr><td></td><td>V<sub>A</sub></td></tr> <tr><td></td><td>I<sub>A</sub></td></tr> <tr><td></td><td>V<sub>C</sub></td></tr> <tr><td></td><td>I<sub>B</sub></td></tr> <tr><td></td><td>I<sub>C</sub></td></tr> <tr><td></td><td>GND</td></tr> </table>	000	V <sub>A</sub>		GND		V <sub>C</sub>		I <sub>A</sub>		I <sub>B</sub>		I <sub>C</sub>		V <sub>T</sub>		I <sub>T</sub>		I <sub>M</sub>		V <sub>R</sub>		I <sub>R</sub>		V <sub>E</sub>		I <sub>E</sub>		V <sub>A</sub>		I <sub>A</sub>		V <sub>C</sub>		I <sub>B</sub>		I <sub>C</sub>		GND
000	V <sub>A</sub>																																																																												
	GND																																																																												
	V <sub>C</sub>																																																																												
	I <sub>A</sub>																																																																												
	I <sub>B</sub>																																																																												
	I <sub>C</sub>																																																																												
	V <sub>T</sub>																																																																												
	I <sub>T</sub>																																																																												
	I <sub>M</sub>																																																																												
	V <sub>R</sub>																																																																												
	I <sub>R</sub>																																																																												
	V <sub>E</sub>																																																																												
	I <sub>E</sub>																																																																												
	V <sub>A</sub>																																																																												
	I <sub>A</sub>																																																																												
	V <sub>C</sub>																																																																												
	I <sub>B</sub>																																																																												
	I <sub>C</sub>																																																																												
	GND																																																																												
000	V <sub>A</sub>																																																																												
	GND																																																																												
	V <sub>C</sub>																																																																												
	I <sub>A</sub>																																																																												
	I <sub>B</sub>																																																																												
	I <sub>C</sub>																																																																												
	V <sub>T</sub>																																																																												
	I <sub>T</sub>																																																																												
	I <sub>M</sub>																																																																												
	V <sub>R</sub>																																																																												
	I <sub>R</sub>																																																																												
	V <sub>E</sub>																																																																												
	I <sub>E</sub>																																																																												
	V <sub>A</sub>																																																																												
	I <sub>A</sub>																																																																												
	V <sub>C</sub>																																																																												
	I <sub>B</sub>																																																																												
	I <sub>C</sub>																																																																												
	GND																																																																												

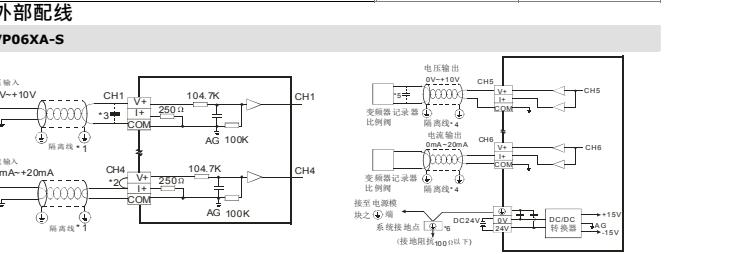

	电压输出有短路保护但须注意长时间短路仍有可能造成内部线路损坏电流输出可升压。 有包含 ASCII/RTU 模式 认识通讯格式为 9600, 7, E, 1, ASCII 详细通讯格式请参考 CR#32 说明。
讯模式 ( RS-485 )	备注 1：当与 PLC 主机串接时，RS-485 通讯无法使用。 备注 2：其通讯格式只可采用 RS-485 通讯修改，无法由主机连接模块方式，下达 TO 指令修改。详细内容请参考 DVP 程序手册之附录“模块通信设置”篇。
DVP-PLC 主机串接说明	模块编号以靠近主机的顺序自动编址由 0 到 7，最大可连接 8 台且不占用数字 I/O 点数。
其它规格	电源规格 最大消耗功率 直流 24VDC ( 20.4VDC ~ 26.4VDC ) (-15% ~ +10%) · 2W · 由外部电源供應。 环境规格 工作环境 操作：0°C ~ 55°C ( 温度 ) · 5 ~ 95% ( 湿度 ) · 污染等级 2 ;

中/低阶环境

振动/冲击

Table 1. Summary of the main characteristics of the four groups.

THE BOSTONIAN

(12=10)·CH6·模式1

H'40CA O R/W C

H'40D1 x R C

